

Konferenz Freisprech System mit 4 wireless Mikrofone




Angekis®



Hochglanz Aktivlautsprecher

Der Aktivlautsprecher im klavierlack Design besteht aus dem 3-Wege System, Echo Canceller und Funk Empfänger.

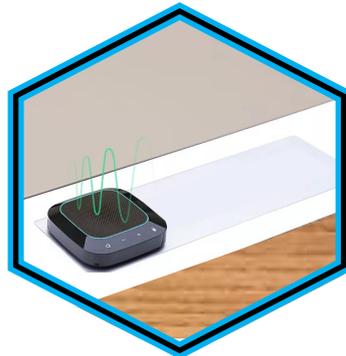

Bequemes kabelloses aufladen

Jedes Mikrofon kann über die mitgelieferte Ladeschalen bequem durch auflegen wieder nachgeladen werden.

COMREON®



Full Duplex

360° Sprach Verarbeitungs Technologie, 384 ms Echo Unterdrückung und dynamische Rauschunterdrückung.



Mikrofon Erweiterung

Die Rückseite des Aktivlautsprecher bietet den Anschluß von optionalem Lavalier- und Hand Mikrofon Empfänger.

ASP-04D-4S

Specification

Component:

- Omni-directional desktop controller with audio processing functions and USB function control, indicators and buttons
- Digital Active Speaker
- USB data cable
- USB charging plug
- Built-in battery

Size

- 110*110*20 mm (omnidirectional mic)
- 410*210*150mm (loudspeaker)

Net Weight

- Single microphone: 200g
- Loudspeaker: 4.7kgs Color
- Microphone: Business Black Speaker
- Matte black painted panel
- Black piano painted wooden side
- Omnidirectional microphone
- Audio bandwidth
- 100-16KHz
- Sensitivity: -38 dB 94dB SPL@1KHz
- Signal to noise ratio: 65dB
- 94dB SPL @ 1KHz, A-weight
- Power supply
- DC 5V / 500mA
- Built-in 1800mA lithium-ion battery

Active speakers

- Power: mid-bass 25W*2, High pitch 10W*1
- Volume: 100dB (0.5m)
- Power adapter: 15V/4A
- Speaker frequency response: 75HZ ~ 20KHZ

Audio

- Digital audio processing
- 384ms echo cancellation
- Dynamic noise reduction
- full duplex
- 360 degree pick-up range
- Up to 3m pickup range Computer system
- Windows 8 / Windows 7 / Windows 10/Windows XP, mac 10.7 and above, etc.

Audio

- support computer software audio
- Team, Zoom and etc.
- microphone mute
- loudspeaker mute
- volume up/down
- indicator

Product

execution standard

- YD/T 993-1998
- GB/T 9254-2008
- GB 4843.1-2011

Recommended

conditions

- temperature: 5°-44°
- humidity: 20-85% condensation free
- noise level: <48db
- storage temperature: -10°-55°
- Reverberation time: <0.5 seconds

Omnidirectional

microphone button

- Speaker mute button
- Microphone mute button
- Volume up button
- Volume down button
- Turn on/off button

Speakerphone indicators:

Switch on/off:

Press and hold the switch button on the bottom of speakerphone for 1 second to turn on; press and hold the switch button on the bottom of speakerphone for 1 second to turn off

Low battery:

1. When the speaker is not turned on, the green light of one of the speakerphones flashes, if other speakerphones do not flash, it means that this speakerphone has low power.
2. In the online state, when the power is low, the red light of the speakerphones will flash.

Charging: The charging indicator of the speakerphones are orange.

Charging completed: the charging indicator turn off.

Normal connection: the green light of the speakerphones are always on, and the indicator light of the master is green
Not connected normally: When the master is not turned on, the speakerphones status is green and blinking.

Microphone mute: the red light of the speakerphone is always on

Speaker mute: the indicator light on the host is steady red
Speaker indicator

Green light: The device is working normally

Speaker volume adjustment knob

- To the Left: Volume down
- To the right: Volume up

